
## KATANA With switch

To adjust door height, loosen screws on top and bottom mounting plate and adjust door to desired position.

Tighten, check and repeat if necessary.

For depth adjustment, turn adjustment screw to desired position.

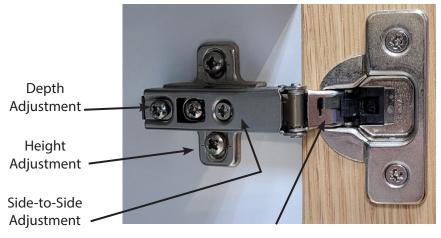


Disable soft-close function. For lightweight doors that close too quickly, turn off one hinge and cycle through open/close to change setting.

## KATANA Without switch

To adjust door height, loosen screws on top and bottom mounting plate and adjust door to desired position.
Tighten, check and repeat if necessary.

For depth adjustment, turn adjustment screw to desired position.

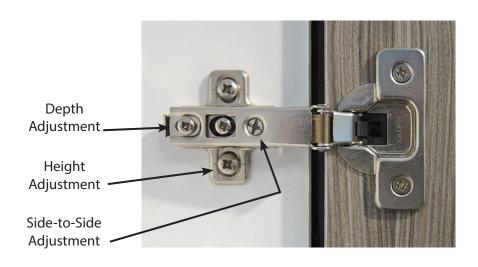

## KATANA Drawer guide

To adjust drawer box height, turn knob until drawer reaches desired position.

To remove drawer box, depress release levers, pull drawer straight out and lift off guides.

